

RESEAU 4

Station: ANDENNE

Fréquence: 107.7 MHz

Position: 5°E06'00" 50°N28'00"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 40 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 07	90: 00	150: 00	210: 00	270: 00	330: 03
40: 07	100: 00	160: 00	220: 00	280: 00	340: 03
50: 07	110: 00	170: 00	230: 00	290: 00	350: 03

Station: ANDERLUES

Fréquence: 106.3 MHz

Position: 4°E15'42" 50°N24'20"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 36 m

Diagramme directionnel de l'antenne:

0: 01	60: 00	120: 00	180: 04	240: 07	300: 06
10: 01	70: 00	130: 01	190: 05	250: 07	310: 05
20: 00	80: 00	140: 01	200: 06	260: 07	320: 04
30: 00	90: 00	150: 02	210: 06	270: 06	330: 03
40: 00	100: 00	160: 03	220: 06	280: 06	340: 03
50: 00	110: 00	170: 03	230: 06	290: 06	350: 02

Station: ARLON

Fréquence: 107.5 MHz

Position: 5°E47'00" 49°N35'00"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 50 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

Station: ARSIMONT

Fréquence: 105.8 MHz

Position: 4°E38'55" 50°N25'27"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

RESEAU 4

Station: ATH

Fréquence: 87.6 MHz

Position: 3°E46'37" 50°N37'47"

Puissance: 1000 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 05	60: 01	120: 00	180: 01	240: 05	300: 07
10: 04	70: 00	130: 00	190: 01	250: 06	310: 07
20: 03	80: 00	140: 00	200: 02	260: 06	320: 06
30: 03	90: 00	150: 00	210: 03	270: 06	330: 06
40: 02	100: 00	160: 00	220: 03	280: 06	340: 06
50: 01	110: 00	170: 00	230: 04	290: 07	350: 06

Station: BASTOGNE

Fréquence: 92.9 MHz

Position: 5°E42'59" 50°N00'30"

Puissance: 1000 W

Hauteur de l'antenne au-dessus du sol: 20 m

Diagramme directionnel de l'antenne:

0: 20	60: 20	120: 15	180: 00	240: 09	300: 20
10: 20	70: 20	130: 10	190: 00	250: 10	310: 20
20: 20	80: 20	140: 09	200: 00	260: 15	320: 20
30: 20	90: 20	150: 06	210: 01	270: 20	330: 20
40: 20	100: 20	160: 03	220: 03	280: 20	340: 20
50: 20	110: 20	170: 01	230: 06	290: 20	350: 20

Station: BLAUGIES

Fréquence: 106.7 MHz

Position: 3°E45'06" 50°N22'58"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 07	60: 04	120: 00	180: 00	240: 01	300: 06
10: 06	70: 03	130: 00	190: 00	250: 02	310: 06
20: 06	80: 03	140: 00	200: 00	260: 03	320: 06
30: 06	90: 02	150: 00	210: 00	270: 03	330: 06
40: 06	100: 01	160: 00	220: 00	280: 04	340: 07
50: 05	110: 01	170: 00	230: 01	290: 05	350: 07

Station: BOUILLON

Fréquence: 97.1 MHz

Position: 5°E04'42" 49°N48'00"

Puissance: 4000 W

Hauteur de l'antenne au-dessus du sol: 40 m

Diagramme directionnel de l'antenne:

0: 05	60: 00	120: 10	180: 16	240: 16	300: 16
10: 03	70: 01	130: 13	190: 16	250: 16	310: 16
20: 02	80: 02	140: 16	200: 16	260: 16	320: 16
30: 01	90: 03	150: 16	210: 16	270: 16	330: 13
40: 00	100: 05	160: 16	220: 16	280: 16	340: 10
50: 00	110: 07	170: 16	230: 16	290: 16	350: 07

RESEAU 4

Station: BRAINE LE COMTE

Fréquence: 97.6 MHz

Position: 4°E08'00" 50°N36'00"

Puissance: 1000 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 20	60: 09	120: 00	180: 15	240: 20	300: 20
10: 20	70: 06	130: 01	190: 20	250: 20	310: 20
20: 20	80: 03	140: 03	200: 20	260: 20	320: 20
30: 20	90: 01	150: 06	210: 20	270: 20	330: 20
40: 15	100: 00	160: 09	220: 20	280: 20	340: 20
50: 10	110: 00	170: 10	230: 20	290: 20	350: 20

Station: BRUXELLES

Fréquence: 103.7 MHz

Position: 4°E22'24" 50°N49'05"

Puissance: 1600 W

Hauteur de l'antenne au-dessus du sol: 145 m

Diagramme directionnel de l'antenne:

0: 20	60: 20	120: 15	180: 00	240: 09	300: 20
10: 20	70: 20	130: 10	190: 00	250: 10	310: 20
20: 20	80: 20	140: 09	200: 00	260: 15	320: 20
30: 20	90: 20	150: 06	210: 01	270: 20	330: 20
40: 20	100: 20	160: 03	220: 03	280: 20	340: 20
50: 20	110: 20	170: 01	230: 06	290: 20	350: 20

Station: CHARLEROI

Fréquence: 88.2 MHz

Position: 4°E27'09" 50°N24'47"

Puissance: 1000 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 16	60: 16	120: 07	180: 00	240: 07	300: 16
10: 16	70: 16	130: 05	190: 00	250: 10	310: 16
20: 16	80: 16	140: 03	200: 01	260: 13	320: 16
30: 16	90: 16	150: 02	210: 02	270: 16	330: 16
40: 16	100: 13	160: 01	220: 03	280: 16	340: 16
50: 16	110: 10	170: 00	230: 05	290: 16	350: 16

Station: CINEY

Fréquence: 107.6 MHz

Position: 5°E03'40" 50°N16'18"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 28 m

Diagramme directionnel de l'antenne:

0: 06	60: 06	120: 03	180: 00	240: 00	300: 03
10: 06	70: 06	130: 02	190: 00	250: 00	310: 03
20: 07	80: 06	140: 01	200: 00	260: 00	320: 04
30: 07	90: 05	150: 01	210: 00	270: 01	330: 05
40: 07	100: 04	160: 00	220: 00	280: 01	340: 06
50: 06	110: 03	170: 00	230: 00	290: 02	350: 06

RESEAU 4

Station: COMINES

Fréquence: 100.7 MHz

Position: 3°E00'15" 50°N45'58"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 25 m

Diagramme directionnel de l'antenne:

0: 06	60: 09	120: 00	180: 00	240: 04	300: 07
10: 05	70: 09	130: 00	190: 01	250: 05	310: 07
20: 12	80: 00	140: 00	200: 01	260: 06	320: 07
30: 11	90: 00	150: 00	210: 02	270: 06	330: 06
40: 11	100: 00	160: 00	220: 03	280: 06	340: 06
50: 10	110: 00	170: 00	230: 03	290: 06	350: 06

Station: DINANT

Fréquence: 106.6 MHz

Position: 4°E56'30" 50°N16'30"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

Station: ELLEZELLES

Fréquence: 106.7 MHz

Position: 3°E43'46" 50°N41'46"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 36 m

Diagramme directionnel de l'antenne:

0: 00	60: 02	120: 06	180: 06	240: 03	300: 00
10: 00	70: 03	130: 06	190: 06	250: 03	310: 00
20: 00	80: 03	140: 06	200: 06	260: 02	320: 00
30: 00	90: 04	150: 07	210: 06	270: 01	330: 00
40: 01	100: 05	160: 07	220: 05	280: 01	340: 00
50: 01	110: 06	170: 07	230: 04	290: 00	350: 00

Station: ENGHIEU

Fréquence: 107.4 MHz

Position: 4°E01'56" 50°N41'37"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 47 m

Diagramme directionnel de l'antenne:

0: 04	60: 00	120: 00	180: 01	240: 06	300: 07
10: 03	70: 00	130: 00	190: 02	250: 06	310: 06
20: 03	80: 00	140: 00	200: 03	260: 06	320: 06
30: 02	90: 00	150: 00	210: 03	270: 06	330: 06
40: 01	100: 00	160: 00	220: 04	280: 07	340: 06
50: 01	110: 00	170: 01	230: 05	290: 07	350: 05

RESEAU 4

Station: HERSEaux

Fréquence: 95.0 MHz

Position: 3°E13'40" 50°N44'30"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 19 m

Diagramme directionnel de l'antenne:

0: 06	60: 06	120: 03	180: 00	240: 00	300: 03
10: 06	70: 06	130: 02	190: 00	250: 00	310: 03
20: 07	80: 06	140: 01	200: 00	260: 00	320: 04
30: 07	90: 05	150: 01	210: 00	270: 01	330: 05
40: 07	100: 04	160: 00	220: 00	280: 01	340: 06
50: 06	110: 03	170: 00	230: 00	290: 02	350: 06

Station: HUY

Fréquence: 105.9 MHz

Position: 5°E14'02" 50°N31'44"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 01	60: 00	120: 01	180: 05	240: 07	300: 05
10: 00	70: 00	130: 01	190: 06	250: 07	310: 04
20: 00	80: 00	140: 02	200: 06	260: 06	320: 03
30: 00	90: 00	150: 03	210: 06	270: 06	330: 03
40: 00	100: 00	160: 03	220: 06	280: 06	340: 02
50: 00	110: 00	170: 04	230: 07	290: 06	350: 01

Station: JODOIGNE

Fréquence: 106.8 MHz

Position: 4°E52'55" 50°N43'30"

Puissance: 200 W

Hauteur de l'antenne au-dessus du sol: 32 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

Station: JUMET

Fréquence: 106.1 MHz

Position: 4°E24'28" 50°N26'42"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 22 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

RESEAU 4

Station: LA LOUVIERE

Fréquence: 94.5 MHz

Position: 4°E12'57" 50°N28'25"

Puissance: 320 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 16	60: 16	120: 03	180: 01	240: 13	300: 16
10: 16	70: 16	130: 02	190: 02	250: 16	310: 16
20: 16	80: 13	140: 01	200: 03	260: 16	320: 16
30: 16	90: 10	150: 00	210: 05	270: 16	330: 16
40: 16	100: 07	160: 00	220: 07	280: 16	340: 16
50: 16	110: 05	170: 00	230: 10	290: 16	350: 16

Station: LA ROCHE

Fréquence: 106.5 MHz

Position: 5°E33'19" 50°N10'47"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 24 m

Diagramme directionnel de l'antenne:

0: 06	60: 02	120: 00	180: 00	240: 03	300: 06
10: 06	70: 01	130: 00	190: 00	250: 04	310: 07
20: 05	80: 01	140: 00	200: 01	260: 05	320: 07
30: 04	90: 00	150: 00	210: 01	270: 06	330: 07
40: 03	100: 00	160: 00	220: 02	280: 06	340: 06
50: 03	110: 00	170: 00	230: 03	290: 06	350: 06

Station: LESVES

Fréquence: 107.9 MHz

Position: 4°E46'56" 50°N23'20"

Puissance: 250 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 20	60: 20	120: 10	180: 00	240: 10	300: 20
10: 20	70: 20	130: 09	190: 00	250: 15	310: 20
20: 20	80: 20	140: 06	200: 01	260: 20	320: 20
30: 20	90: 20	150: 03	210: 03	270: 20	330: 20
40: 20	100: 20	160: 01	220: 06	280: 20	340: 20
50: 20	110: 15	170: 00	230: 09	290: 20	350: 20

Station: LIBRAMONT

Fréquence: 106.2 MHz

Position: 5°E22'42" 49°N55'04"

Puissance: 300 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 03	180: 06	240: 06	300: 02
10: 00	70: 00	130: 04	190: 07	250: 06	310: 01
20: 00	80: 01	140: 05	200: 07	260: 05	320: 01
30: 00	90: 01	150: 06	210: 07	270: 04	330: 00
40: 00	100: 02	160: 06	220: 06	280: 03	340: 00
50: 00	110: 03	170: 06	230: 06	290: 03	350: 00

RESEAU 4

Station: LIEGE

Fréquence: 104.5 MHz

Position: 5°E32'56" 50°N37'34"

Puissance: 5000 W

Hauteur de l'antenne au-dessus du sol: 150 m

Diagramme directionnel de l'antenne:

0: 05	60: 01	120: 00	180: 01	240: 05	300: 07
10: 04	70: 00	130: 00	190: 01	250: 06	310: 07
20: 03	80: 00	140: 00	200: 02	260: 06	320: 06
30: 03	90: 00	150: 00	210: 03	270: 06	330: 06
40: 02	100: 00	160: 00	220: 03	280: 06	340: 06
50: 01	110: 00	170: 00	230: 04	290: 07	350: 06

Station: MALMEDY

Fréquence: 104.7 MHz

Position: 5°E59'15" 50°N24'36"

Puissance: 2000 W

Hauteur de l'antenne au-dessus du sol: 40 m

Diagramme directionnel de l'antenne:

0: 03	60: 00	120: 00	180: 03	240: 06	300: 06
10: 02	70: 00	130: 00	190: 03	250: 06	310: 06
20: 01	80: 00	140: 00	200: 04	260: 07	320: 06
30: 01	90: 00	150: 01	210: 05	270: 07	330: 05
40: 00	100: 00	160: 01	220: 06	280: 07	340: 04
50: 00	110: 00	170: 02	230: 06	290: 06	350: 03

Station: MARCHE

Fréquence: 107.9 MHz

Position: 5°E21'00" 50°N12'00"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 07	60: 04	120: 00	180: 00	240: 01	300: 06
10: 06	70: 03	130: 00	190: 00	250: 02	310: 06
20: 06	80: 03	140: 00	200: 00	260: 03	320: 06
30: 06	90: 02	150: 00	210: 00	270: 03	330: 06
40: 06	100: 01	160: 00	220: 00	280: 04	340: 07
50: 05	110: 01	170: 00	230: 01	290: 05	350: 07

Station: MONS

Fréquence: 102.0 MHz

Position: 3°E56'54" 50°N27'27"

Puissance: 2000 W

Hauteur de l'antenne au-dessus du sol: 80 m

Diagramme directionnel de l'antenne:

0: 01	60: 00	120: 00	180: 04	240: 07	300: 06
10: 01	70: 00	130: 01	190: 05	250: 07	310: 05
20: 00	80: 00	140: 01	200: 06	260: 07	320: 04
30: 00	90: 00	150: 02	210: 06	270: 06	330: 03
40: 00	100: 00	160: 03	220: 06	280: 06	340: 03
50: 00	110: 00	170: 03	230: 06	290: 06	350: 02

RESEAU 4

Station: NAMUR

Fréquence: 87.6 MHz

Position: 4°E53'54" 50°N26'02"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 70 m

Diagramme directionnel de l'antenne:

0: 03	60: 16	120: 16	180: 16	240: 13	300: 01
10: 05	70: 16	130: 16	190: 16	250: 10	310: 00
20: 07	80: 16	140: 16	200: 16	260: 07	320: 00
30: 10	90: 16	150: 16	210: 16	270: 05	330: 00
40: 13	100: 16	160: 16	220: 16	280: 03	340: 01
50: 16	110: 16	170: 16	230: 16	290: 02	350: 02

Station: NEUFCHATEAU

Fréquence: 106.0 MHz

Position: 5°E25'10" 50°N02'00"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 03	60: 06	120: 06	180: 03	240: 00	300: 00
10: 03	70: 06	130: 06	190: 02	250: 00	310: 00
20: 04	80: 07	140: 06	200: 01	260: 00	320: 00
30: 05	90: 07	150: 05	210: 01	270: 00	330: 01
40: 06	100: 07	160: 04	220: 00	280: 00	340: 01
50: 06	110: 06	170: 03	230: 00	290: 00	350: 02

Station: NIVELLES

Fréquence: 105.3 MHz

Position: 4°E20'00" 50°N34'00"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 15 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 02	180: 06	240: 06	300: 03
10: 00	70: 00	130: 03	190: 06	250: 06	310: 03
20: 00	80: 00	140: 03	200: 06	260: 06	320: 02
30: 00	90: 00	150: 04	210: 07	270: 06	330: 01
40: 00	100: 01	160: 05	220: 07	280: 05	340: 01
50: 00	110: 01	170: 06	230: 07	290: 04	350: 00

Station: PERUWELZ

Fréquence: 107.3 MHz

Position: 3°E35'37" 50°N30'13"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 45 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 04	180: 07	240: 06	300: 01
10: 00	70: 01	130: 05	190: 07	250: 05	310: 01
20: 00	80: 01	140: 06	200: 07	260: 04	320: 00
30: 00	90: 02	150: 06	210: 06	270: 03	330: 00
40: 00	100: 03	160: 06	220: 06	280: 03	340: 00
50: 00	110: 03	170: 06	230: 06	290: 02	350: 00

RESEAU 4

Station: PHILIPPEVILLE

Fréquence: 106.1 MHz

Position: 4°E33'07" 50°N11'51"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 06	60: 03	120: 00	180: 00	240: 02	300: 06
10: 06	70: 03	130: 00	190: 00	250: 03	310: 06
20: 06	80: 02	140: 00	200: 00	260: 03	320: 06
30: 06	90: 01	150: 00	210: 00	270: 04	330: 07
40: 05	100: 01	160: 00	220: 01	280: 05	340: 07
50: 04	110: 00	170: 00	230: 01	290: 06	350: 07

Station: ROCHEFORT

Fréquence: 107.0 MHz

Position: 5°E13'08" 50°N08'52"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 30 m

Diagramme directionnel de l'antenne:

0: 03	60: 00	120: 00	180: 03	240: 06	300: 06
10: 02	70: 00	130: 00	190: 03	250: 06	310: 06
20: 01	80: 00	140: 00	200: 04	260: 07	320: 06
30: 01	90: 00	150: 01	210: 05	270: 07	330: 05
40: 00	100: 00	160: 01	220: 06	280: 07	340: 04
50: 00	110: 00	170: 02	230: 06	290: 06	350: 03

Station: SPA

Fréquence: 107.2 MHz

Position: 5°E50'15" 50°N29'24"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 13 m

Diagramme directionnel de l'antenne:

0: 07	60: 05	120: 01	180: 00	240: 01	300: 05
10: 07	70: 04	130: 00	190: 00	250: 01	310: 06
20: 06	80: 03	140: 00	200: 00	260: 02	320: 06
30: 06	90: 03	150: 00	210: 00	270: 03	330: 06
40: 06	100: 02	160: 00	220: 00	280: 03	340: 06
50: 06	110: 01	170: 00	230: 00	290: 04	350: 07

Station: TOURNAI

Fréquence: 90.0 MHz

Position: 3°E19'11" 50°N35'27"

Puissance: 1000 W

Hauteur de l'antenne au-dessus du sol: 50 m

Diagramme directionnel de l'antenne:

0: 10	60: 00	120: 10	180: 20	240: 20	300: 20
10: 05	70: 00	130: 20	190: 20	250: 20	310: 20
20: 03	80: 01	140: 20	200: 20	260: 20	320: 20
30: 02	90: 02	150: 20	210: 20	270: 20	330: 20
40: 01	100: 03	160: 20	220: 20	280: 20	340: 20
50: 00	110: 05	170: 20	230: 20	290: 20	350: 20

RESEAU 4

Station: WAREMME

Fréquence: 107.1 MHz

Position: 5°E15'47" 50°N41'02"

Puissance: 100 W

Hauteur de l'antenne au-dessus du sol: 36 m

Diagramme directionnel de l'antenne:

0: 00	60: 00	120: 00	180: 00	240: 00	300: 00
10: 00	70: 00	130: 00	190: 00	250: 00	310: 00
20: 00	80: 00	140: 00	200: 00	260: 00	320: 00
30: 00	90: 00	150: 00	210: 00	270: 00	330: 00
40: 00	100: 00	160: 00	220: 00	280: 00	340: 00
50: 00	110: 00	170: 00	230: 00	290: 00	350: 00

Station: WAVRE

Fréquence: 89.1 MHz

Position: 4°E36'38" 50°N43'10"

Puissance: 500 W

Hauteur de l'antenne au-dessus du sol: 15 m

Diagramme directionnel de l'antenne:

0: 20	60: 20	120: 06	180: 01	240: 20	300: 20
10: 20	70: 20	130: 03	190: 03	250: 20	310: 20
20: 20	80: 20	140: 01	200: 06	260: 20	320: 20
30: 20	90: 15	150: 00	210: 09	270: 20	330: 20
40: 20	100: 10	160: 00	220: 10	280: 20	340: 20
50: 20	110: 09	170: 00	230: 15	290: 20	350: 20

Station: WINENNE

Fréquence: 101.4 MHz

Position: 4°E53'46" 50°N05'53"

Puissance: 160 W

Hauteur de l'antenne au-dessus du sol: 35 m

Diagramme directionnel de l'antenne:

0: 05	60: 07	120: 05	180: 01	240: 00	300: 01
10: 06	70: 07	130: 04	190: 00	250: 00	310: 01
20: 06	80: 06	140: 03	200: 00	260: 00	320: 02
30: 06	90: 06	150: 03	210: 00	270: 00	330: 03
40: 06	100: 06	160: 02	220: 00	280: 00	340: 03
50: 07	110: 06	170: 01	230: 00	290: 00	350: 04
